
WEIGH-TRONIX (11-1-95) CUVY, UEVS. WI 120 Rev B Accumulator V. 2.05

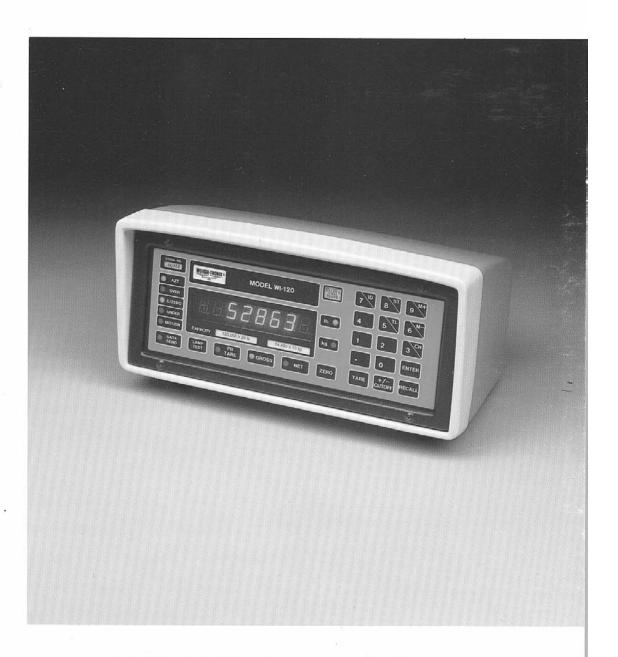

WI-120 Accumulator User's Manual

TABLE OF CONTENTS

PART 1: INTRODUCTION TO THE WI-120 ACCUMULATOR

DEFINITION AND OVERVIEW	1	
SPECIFICATIONS	2	
ENCLOSURES	3	
	- 2	
	8	
Setting the Operating Voltage	9	
Powering-Up and Initializing	10	
Accessing Configuration Mode and Viewing the Parameters	11	
Applying Security Code	13	
Reading and Setting Time/Date	14	
WEIGHING FUNCTIONS		
Entering, Reviewing, and Clearing Cutoff Values	24	
	SPECIFICATIONS ENCLOSURES FEATURES FEATURES FRONT PANEL KEYBOARD FUNCTIONS Keyboard Summary Alphabetical Glossary of Key Functions DISPLAY MESSAGES TII: OPERATING THE WI-120 ACCUMULATOR INITIAL OPERATING PROCEDURES Setting the Operating Voltage Powering-Up and Initializing Accessing Configuration Mode and Viewing the Parameters Applying Security Code Reading and Setting Time/Date Enabling and Entering Identification Number WEIGHING FUNCTIONS Zeroing the Scale Obtaining a Gross Weight Value Using Pushbutton Tare Function to Store Container Weights Entering and Clearing Over/Under Values	SPECIFICATIONS 2 ENCLOSURES 3 FEATURES 4 FRONT PANEL KEYBOARD FUNCTIONS 5 Keyboard Summary 5 Alphabetical Glossary of Key Functions 5 DISPLAY MESSAGES 8 IT II: OPERATING THE WI-120 ACCUMULATOR INITIAL OPERATING PROCEDURES 9 Setting the Operating Voltage

Continued

	ACCUMULATOR FUNCTIONS		27
	Configuration Parameters for Accumulator Functions		27
	Clearing Accumulator Channels		28
	Accumulating Weight Values and Transmitting to Peripheral D		
	Transmitting Scale Weight Only to Peripheral Device		
	Using Channel Data Display		
	Transmitting a Subtotals Report of All Channels		
			.02
PAI	RT III: CONFIGURING THE WI-120 ACCUMULATOR		
	PLANNING PERIPHERAL DEVICES FOR TRANSMISSION OF D	DATA	
	ENABLING CONFIGURATION MODE		
	SELECTING OPTIONS FOR FUNCTION PARAMETERS		38
	Security Code	Automatic Zero Tracking (AZT)	48
	Time/Date 41	Motion Window	48
	Units of Measure	Auto-Accumulate after Motion	49
	Scale Capacity Multiplier	U.S.A. or Canadian Compliance	50
	Decimal Point Placement	Power-Up Display	51
	Division Size	Identification Number	51
	Display Rate 45	Single- or Multiple-Channel Accumulation	52
	Digital Motion Stabilizer (DMS) 46	Accumulate-and-Report Method	52
	Blank Display During Motion 47	Transaction Counter	53
	Digital or Analog Zero 47		
	Serial Communication Parameters for Printer Port A		54
	Port A: Printer Control Codes Parameter		
	Page-Formatting Parameters for Printer Port A		
	Serial Communication Parameters for Computer/Programmab		
	Formatting Parameters for Computer/Programmable Controlled		
	LOCKING IN SELECTIONS AND DISABLING CONFIGURATION		73
			1.3

This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store:

https://the-checkout-tech.com/manuals/Weigh-Tronix/WI-120 Accumulator user manual.l

And our free Online Keysheet maker:

https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM