


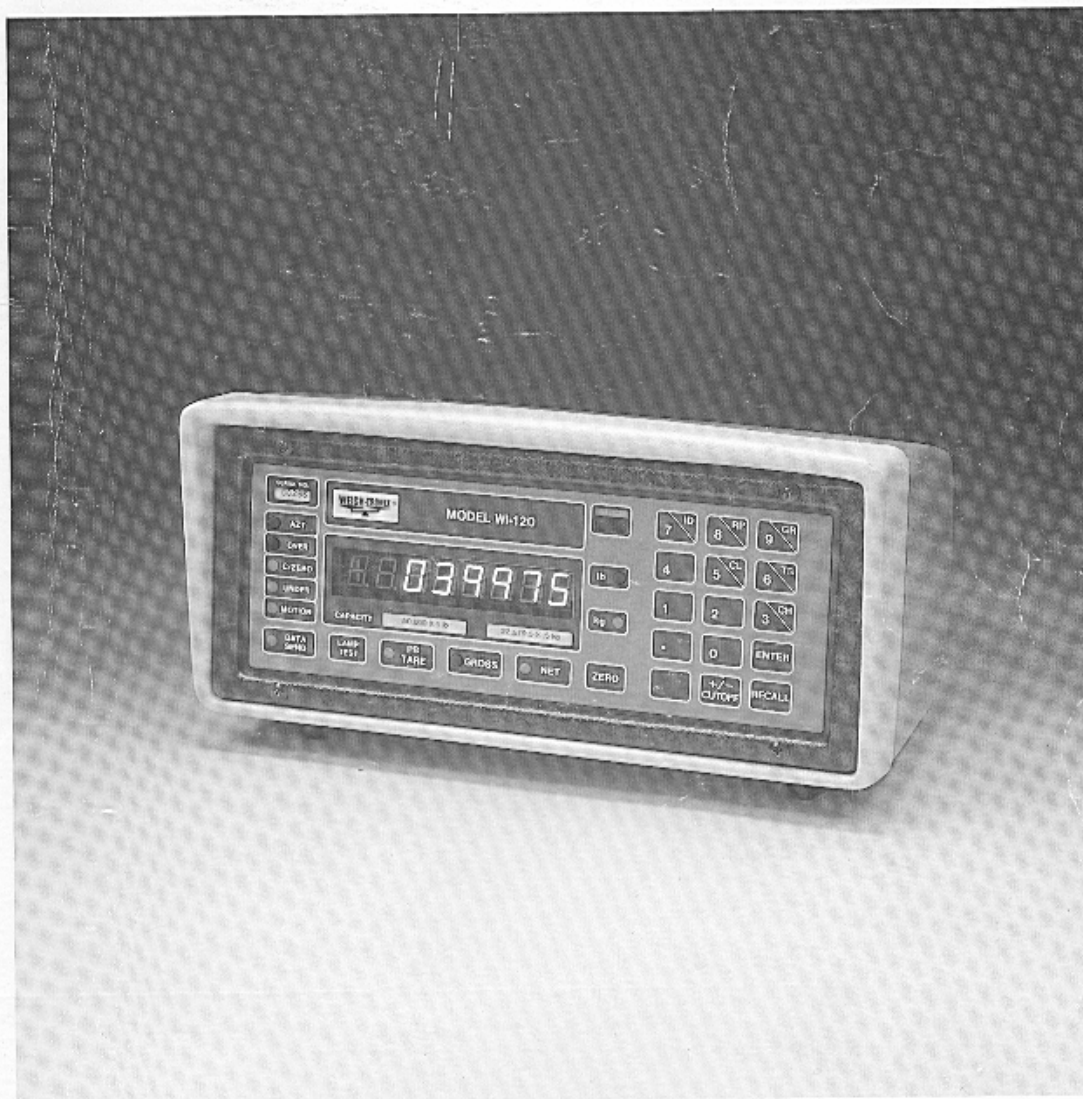

Model WI-120 GROSS-TARE-NET INDICATOR



User's Manual

Cannot do a remote print
from GTN

TABLE OF CONTENTS

PART I: INTRODUCTION TO THE WI-120 GROSS-TARE-NET INDICATOR	1
DEFINITION	1
MANUAL OVERVIEW	2
SPECIFICATIONS	3
ENCLOSURES	4
FEATURES	5
FRONT PANEL KEYBOARD FUNCTIONS	6
ALPHABETICAL GLOSSARY OF KEY FUNCTIONS	7
DISPLAY MESSAGES	10
PART II: INITIAL OPERATING PROCEDURES	11
SETTING THE OPERATING VOLTAGE	11
POWERING-UP AND INITIALIZING	12
ACCESSING CONFIGURATION MODE AND VIEWING THE PARAMETERS	14
APPLYING SECURITY CODE	17
READING AND SETTING TIME AND DATE	18
ENABLING AND ENTERING IDENTIFICATION NUMBER	20
PART III: BASIC WEIGHING FUNCTIONS	23
ZEROING THE SCALE	23
OBTAINING GROSS VALUE	24
OBTAINING NET VALUE WITH PUSHBUTTON TARE KEY	24
TRANSMITTING DISPLAYED WEIGHT ONLY	25
ENTERING SETPOINTS FOR OVER/UNDER INDICATION	26
ENTERING CUTOFF VALUES FOR AUTOMATED SCALE SYSTEMS	27
PART IV: NET-CALCULATING FUNCTIONS	31
OVERVIEW OF FUNCTIONS	31
USING GROSS/TARE OPERATING MODE TO OBTAIN NET VALUE	33
USING 99-TARE OPERATING MODE TO OBTAIN NET WEIGHT VALUE	43
VIEWING CHANNEL INFORMATION WITHOUT TRANSMITTING DATA	53
CLEARING A SINGLE CHANNEL	55
MASTER-CLEARING ALL CHANNELS	59
REPORTING A SINGLE CHANNEL	60
TRANSMITTING AN ALL-CHANNELS REPORT OF ALL VALUES	61

Continued on next page . . .

only GTN
Program displayed
weight - send the
05 will take it.
page length errors.
programed Gross weight
won't work.

TABLE OF CONTENTS, continued . . .

PART V: CONFIGURING THE WI-120 GROSS-TARE-NET INDICATOR	65
SETTING UP YOUR SCALE SYSTEM AND CONFIGURING FOR YOUR APPLICATION	65
ENABLING CONFIGURATION MODE: UNSEALING THE INDICATOR	69
SETTING FUNCTION PARAMETERS IN CONFIGURATION MODE	69
SECURITY CODE	71
TIME/DATE	72
OPERATING MODE	74
UNITS OF MEASURE	75
SCALE CAPACITY MULTIPLIER	76
DECIMAL POINT PLACEMENT	77
DIVISION SIZE	77
DISPLAY RATE	77
BLANK DISPLAY DURING MOTION	78
DIGITAL OR ANALOG ZERO	79
AUTOMATIC ZERO TRACKING (AZT)	79
MOTION WINDOW	80
U.S. OR CANADIAN COMPLIANCE	81
POWER-UP DISPLAY OF 8's	82
IDENTIFICATION NUMBER	82
OPERATION OUTPUT	83
ACCUMULATE NET	84
TRANSACTION COUNT	85
PORT A PARAMETERS FOR PRINTERS (BAUD RATE, ETC.)	86
PORT A: PRINTER CONTROL CODES PARAMETER	89
PAGE-FORMATTING PARAMETERS FOR PRINTER PORT A	95
PORT B PARAMETERS FOR COMPUTERS AND PROGRAMMABLE CONTROLLERS	101
FORMATTING PARAMETERS FOR PORT B	104
LOCKING IN SETTINGS AND DISABLING CONFIGURATION MODE	106

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Weigh-Tronix/WI-120 Gross Tare Net Indicator u](https://the-checkout-tech.com/manuals/Weigh-Tronix/WI-120%20Gross%20Tare%20Net%20Indicator%20u)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)