

XR Series LED Remote Displays



XR 2000



XR 4500



XR 4500TL



XR 6500

Installation Instructions

NORTH AMERICA

Table of Contents

	<i>page</i>
Chapter 1 General information and warnings	7
About this manual	7
Installation	8
Electrical installation	8
Pluggable equipment	8
Permanently wired equipment - Isolator requirements	8
Wet conditions	8
Routine maintenance	9
Cleaning the machine	9
Training	9
FCC and EMC declarations of compliance	10
Chapter 2 Introduction	11
Display	11
Keypad	12
Chapter 3 Installation	13
Installing the XR 4500, XR 4500TL or XR 6500	13
Pre-installation (Receiving Inspection)	13
Opening an Unmounted Enclosure	13
Removing the Electronics Carriage	14
Mounting Instructions	14
Opening a Mounted Enclosure	17
Installing the XR 2000	19
Opening the XR 2000 Enclosure	19
Mounting Instructions	19
Chapter 4 Wiring	21
Wiring the XR 4500, 4500TL or 6500	21
Power Wiring	21
Communications Wiring	23
Wiring the XR 2000	26
Power Wiring	26
Communication Wiring	26
Chapter 5 Wireless Communication	29
Wireless Set-up for All XR Models	29
XR Remote Display	29
Indicator	29
Base Station Wireless Transceiver	30
Wireless Connection Test	31
Chapter 6 Start-Up	32
Power On/Off	32
Reset Button	32

Auto-Learn	32
LEARN Button	33
Diagnostic Indicator Lights	33
Chapter 7 Configuration Mode	35
Entering Configuration Mode	35
Configuration Parameters	36
Parameter 1.0: Daytime Brightness Level	36
Parameter 1.1: Nighttime Brightness Level	36
Parameter 1.2: Power-save Mode	36
Parameter 1.3: Mirror Display Mode	36
Parameter 1.4: Multi-Drop ID	37
Parameter 1.5: Radio Channel Select	37
Parameter 1.6: Utility Program Select	37
Auto-Learn Parameters	38
Parameter 2.0: Manual Learn (Assisted Learn)	38
Parameter 2.1: Start-up Auto-Learn	38
Parameter 2.2: Leading Zero Suppression	38
Parameter 2.3: Set Scale Over	39
Parameter 2.4: Lock Units	39
Parameter 2.5: Lock Weighing Mode	39
Parameter 2.6: Lock Traffic Light	39
Time / Date / Temp Parameters	40
Parameter 3.0: Time Display	40
Parameter 3.1: Date Display	40
Parameter 3.2: Temperature Display	40
Parameter 3.3: Weight Display	40
Parameter 3.4: Time Threshold	40
Diagnostic Parameters	41
Parameter 9.0: Com Port	41
Parameter 9.1: String Counter	41
Parameter 9.2: Baud Rate	41
Parameter 9.3: Configuration Lockout	41
Parameter 9.4: Number Counter	41
Parameter 9.8: Test Display	42
Parameter 9.9: Reset Defaults	42
CONFIG Switches (XR 2000)	43
Chapter 8 XR 4500 TL Traffic Light Control	46
Built-in Traffic Light (XR 4500TL Only)	46
Chapter 9 Time and Date (not available on XR 2000)	47
Set Time & Date	47
Adjust Time	47
Adjust Date	47
Battery / Battery Replacement	47
Chapter 10 Temperature Probe Installation (not on XR 2000)	48
Chapter 11 XR Utility Programs	50

XR 4500, XR 4500TL, and XR 6500 Utility Programs	50
Program 0: Normal Operation	50
Program 1: Simple Traffic Light	50
Program 2: Motion Traffic Light	50
Program 3: Normal Operation with Traffic Light Commands	50
Program 4: Freeze Weight (Capture Print String)	50
Program 5: Command Mode	51
PROGRAM 12: LEGACY COMMAND MODE	53
XR 2000 Utility Programs	54
Chapter 12 Troubleshooting & Error Messages	57
Chapter 13 Spare Parts Lists	59
Chapter 14 Specifications	62

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*