
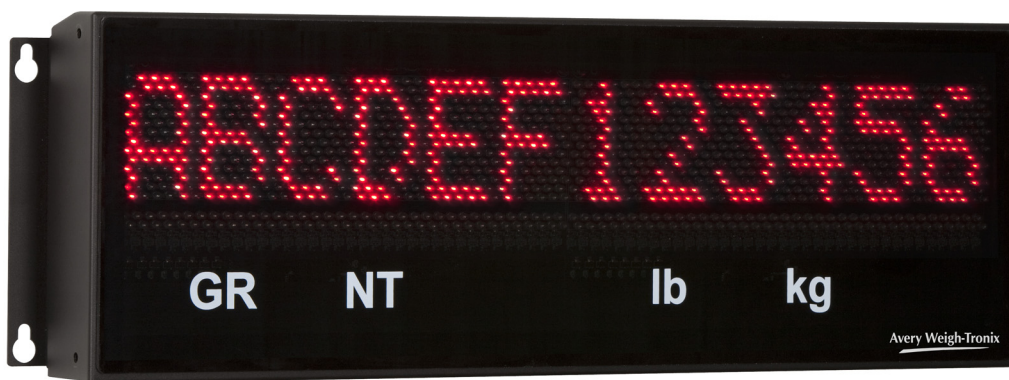


# **XR-8M and XR-12M**

## **Alphanumeric Remote Displays**

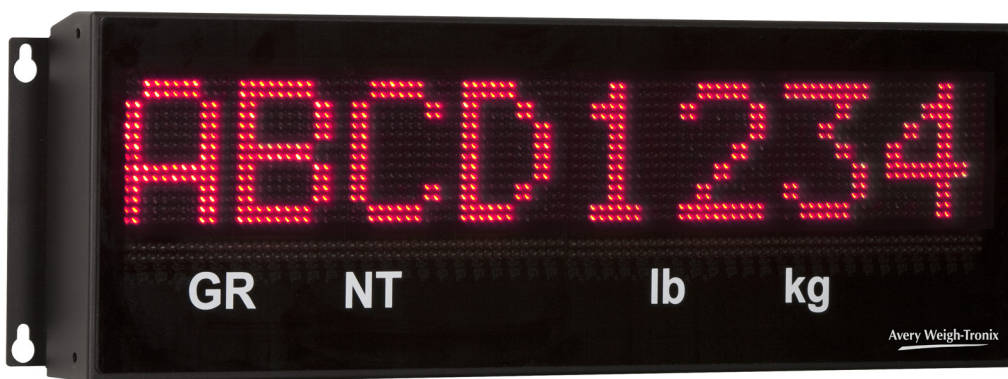

## **Installation Instructions**

# Table of Contents

	<i>page</i>
<b>Chapter 1 General information and warnings</b> .....	7
About this manual .....	7
Text conventions .....	7
Special messages .....	7
Installation .....	8
Electrical installation .....	8
Pluggable equipment .....	8
Permanently wired equipment - Isolator requirements .....	8
Safe handling of equipment with batteries .....	9
Wet conditions .....	9
Routine maintenance .....	9
Cleaning the machine .....	9
Training .....	9
Sharp objects .....	10
FCC and EMC declarations of compliance .....	10
<b>Chapter 2 Introduction</b> .....	11
Displays .....	12
Keypad .....	13
Opening the XR Enclosure .....	13
Lowering the Electronics Plate .....	14
Circuit Boards .....	15
<b>Chapter 3 Installation</b> .....	16
Receiving Inspection .....	16
Mounting Instructions .....	16
Communications Wiring .....	17
<b>Chapter 4 START-UP</b> .....	20
Power ON/OFF .....	20
Reset Button .....	20
Auto-Learn .....	20
Learn Button .....	21
Diagnostic Indicator Lights .....	21
Bargraph Function .....	22
<b>Chapter 5 Configuration Mode</b> .....	23
Entering Configuration Mode .....	23
Navigating Configuration Parameters .....	23
Editing Configuration Parameters .....	23
Exit & Save Configuration .....	24
Configuration Parameters .....	24
Parameter 1.0: Daytime Brightness Level .....	24
Parameter 1.1: Nighttime Brightness Level .....	24
Parameter 1.2: Power-Save Mode .....	25
Parameter 1.3: Mirror Display Mode .....	25
Parameter 1.4: Multi-Drop ID .....	25
Parameter 1.5: Radio Channel Select .....	26
Parameter 1.6: Utility Program Select .....	26
Auto-learn Parameters .....	26
Parameter 2.0: Manual Learn (Assisted Learn) .....	26
Parameter 2.1: Start-up Auto-Learn .....	27

Parameter 2.2: Leading Zero Suppression .....	27
Parameter 2.3: Set Scale Over .....	27
Parameter 2.4: Lock Units .....	28
Parameter 2.5: Lock Weighing Mode .....	28
Time / Date / Temp Parameters .....	28
Parameter 3.0: Time Display .....	28
Parameter 3.1: Date Display .....	29
Parameter 3.2: Temperature Display .....	29
Parameter 3.3: Weight Display .....	29
Parameter 3.4: Time Threshold .....	29
Dlagnostic Parameters .....	30
Parameter 9.0: Com Port .....	30
Parameter 9.1: String Counter .....	30
Parameter 9.2: Baud Rate .....	30
Parameter 9.3: Configuration Lockout .....	30
Parameter 9.4: Number Counter .....	31
Parameter 9.8: Test Display .....	31
Parameter 9.9: Reset Defaults .....	31
<b>Chapter 6 Utility Programs .....</b>	<b>32</b>
Program 0: Normal Operation .....	32
Program 4: Freeze Weight (Capture Print String) .....	32
Program 5: Command Mode (G2) .....	32
Activating Command Mode .....	32
Transmit a Weight String .....	32
Transmit Status Characters .....	33
Transmit an Alphanumeric Message / Data String .....	33
Control Commands .....	33
Sample Command Mode Data Strings .....	34
Multi-Drop IDs & Networking .....	36
<b>Chapter 7 Time &amp; Date .....</b>	<b>37</b>
Set Time & Date .....	37
Adjust Time .....	37
Adjust Date .....	37
Battery Replacement .....	38
<b>Chapter 8 Wireless Setup .....</b>	<b>39</b>
XR Integrated Wireless Installation .....	39
Indicator & Wireless Transceiver .....	41
Wireless Connection Test .....	41
<b>Chapter 9 Temperature Probe Installation .....</b>	<b>42</b>
<b>Chapter 10 Troubleshooting &amp; Error Messages .....</b>	<b>44</b>
<b>Chapter 11 Parts .....</b>	<b>46</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*