
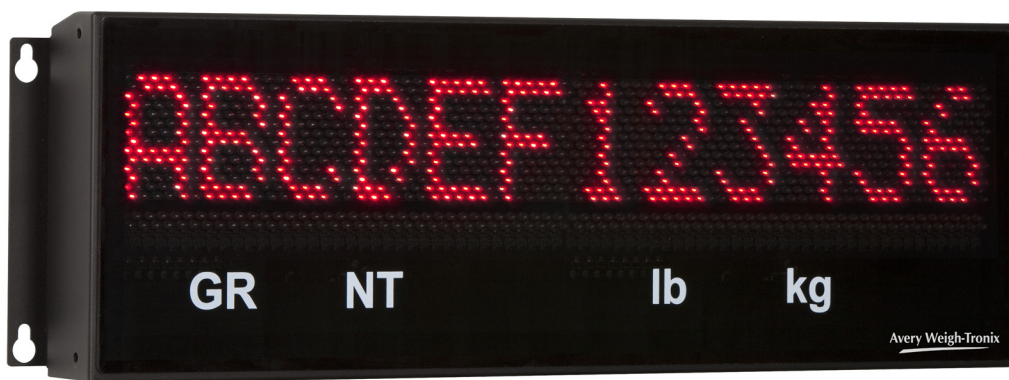


XR-8M and XR-12M

Alphanumeric Remote Displays

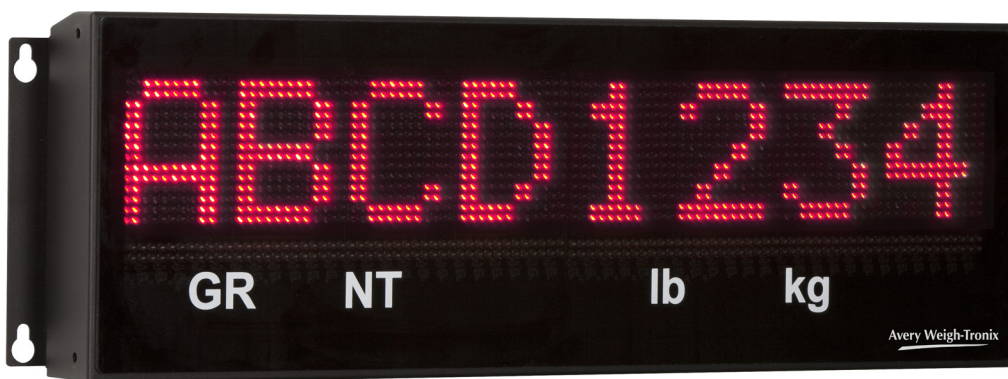

Installation Instructions

Table of Contents

	<i>page</i>
Chapter 1 General information and warnings	7
About this manual	7
Text conventions	7
Special messages	7
Installation	8
Electrical installation	8
Pluggable equipment	8
Permanently wired equipment - Isolator requirements	8
Safe handling of equipment with batteries	9
Wet conditions	9
Routine maintenance	9
Cleaning the machine	9
Training	9
Sharp objects	10
FCC and EMC declarations of compliance	10
Chapter 2 Introduction	11
Displays	12
Keypad	13
Opening the XR Enclosure	13
Lowering the Electronics Plate	14
Circuit Boards	15
Chapter 3 Installation	16
Receiving Inspection	16
Mounting Instructions	16
Communications Wiring	17
Chapter 4 START-UP	20
Power ON/OFF	20
Reset Button	20
Auto-Learn	20
Learn Button	21
Diagnostic Indicator Lights	21
Bargraph Function	22
Chapter 5 Configuration Mode	23
Entering Configuration Mode	23
Navigating Configuration Parameters	23
Editing Configuration Parameters	23
Exit & Save Configuration	24
Configuration Parameters	24
Parameter 1.0: Daytime Brightness Level	24
Parameter 1.1: Nighttime Brightness Level	24
Parameter 1.2: Power-Save Mode	25
Parameter 1.3: Mirror Display Mode	25
Parameter 1.4: Multi-Drop ID	25
Parameter 1.5: Radio Channel Select	26
Parameter 1.6: Utility Program Select	26
Auto-learn Parameters	26
Parameter 2.0: Manual Learn (Assisted Learn)	26
Parameter 2.1: Start-up Auto-Learn	27

Parameter 2.2: Leading Zero Suppression	27
Parameter 2.3: Set Scale Over	27
Parameter 2.4: Lock Units	28
Parameter 2.5: Lock Weighing Mode	28
Time / Date / Temp Parameters	28
Parameter 3.0: Time Display	28
Parameter 3.1: Date Display	29
Parameter 3.2: Temperature Display	29
Parameter 3.3: Weight Display	29
Parameter 3.4: Time Threshold	29
Dlagnostic Parameters	30
Parameter 9.0: Com Port	30
Parameter 9.1: String Counter	30
Parameter 9.2: Baud Rate	30
Parameter 9.3: Configuration Lockout	30
Parameter 9.4: Number Counter	31
Parameter 9.8: Test Display	31
Parameter 9.9: Reset Defaults	31
Chapter 6 Utility Programs	32
Program 0: Normal Operation	32
Program 4: Freeze Weight (Capture Print String)	32
Program 5: Command Mode (G2)	32
Activating Command Mode	32
Transmit a Weight String	32
Transmit Status Characters	33
Transmit an Alphanumeric Message / Data String	33
Control Commands	33
Sample Command Mode Data Strings	34
Multi-Drop IDs & Networking	36
Chapter 7 Time & Date	37
Set Time & Date	37
Adjust Time	37
Adjust Date	37
Battery Replacement	38
Chapter 8 Wireless Setup	39
XR Integrated Wireless Installation	39
Indicator & Wireless Transceiver	41
Wireless Connection Test	41
Chapter 9 Temperature Probe Installation	42
Chapter 10 Troubleshooting & Error Messages	44
Chapter 11 Parts	46

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Weigh-Tronix/XR-8M and XR-12M installation ins](https://the-checkout-tech.com/manuals/Weigh-Tronix/XR-8M%20and%20XR-12M%20installation%20instructions.pdf)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)