


**Avery Weigh-Tronix**

**ZQ375**  
Checkweigher

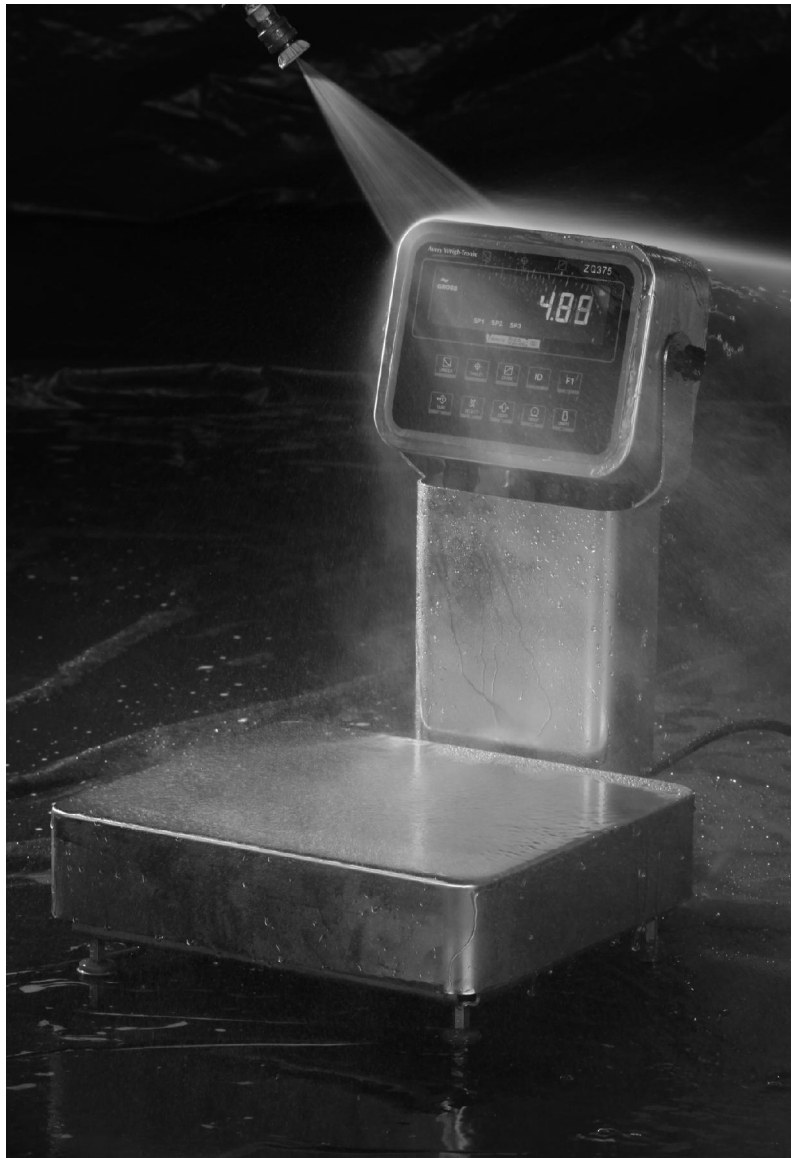

**User Instructions**

# Table of Contents

page

<b>Chapter 1 General information and warnings</b> .....	7
About this manual .....	7
Text conventions .....	7
Special messages .....	7
Installation .....	8
Safe handling of equipment with batteries .....	8
Wet conditions .....	8
Routine maintenance .....	8
Cleaning the machine .....	9
ZQ375 cleaning process .....	9
Indicator .....	10
Cleaning the Rear of the Column .....	11
Base Cleaning .....	11
Training .....	11
Sharp objects .....	12
FCC and EMC declarations of compliance .....	12
United States .....	12
Canada .....	12
European Countries .....	12
Declaration of Conformity .....	13
<b>Chapter 2 Introduction</b> .....	14
Initial setup .....	14
Front panel .....	15
Annunciators .....	17
Tolerance entry procedure .....	18
Example: To increase a value of 0.002 to 0.125: .....	18
Numeric entry procedure .....	19
Example: To key in the number 507: .....	19
ID Entry Procedure .....	19
Powering up the ZQ375 .....	20
Battery option .....	20
Installation .....	21
Battery charging and operation .....	22
Checkweigher Operation on Battery Power .....	22
Light stack option .....	23
Light stack operation .....	23
<b>Chapter 3 Checkweighing applications</b> .....	24
Checkweighing terminology .....	24
Normal weighing procedures .....	25
Gross weighing .....	25
Tare/Net weighing .....	25
Using Pushbutton Tare (if enabled) .....	26
Using Preset Tare (if enabled) .....	26
Sim375 application .....	28
Checkweighing .....	28
Switching Between Checkweighing and Normal Weighing Mode .....	28
Setting a New Target Weight and Simple Checkweighing .....	28
View the High and Low Tolerances .....	28
Set New High and Low Tolerances .....	29

Clearing a Target Weight .....	29
Mid375 application .....	30
SELECT key operation .....	30
Checkweighing .....	30
Setting a New Target Weight and Checkweighing .....	30
Quick Check Method .....	30
Preset Target Weight .....	31
View the Target Weight and Upper and Lower Tolerances .....	31
Set New Upper and Lower Tolerances .....	31
Transaction counter .....	32
Adv375 application .....	33
SELECT key operation .....	33
Checkweighing .....	33
Setting a New Target Weight and Checkweighing .....	34
Choosing a PLU and Checkweighing .....	34
View the Upper and Lower Tolerances .....	35
Set New Upper and Lower Tolerances .....	35
Transaction counter .....	36
Statistical Package and Packrun .....	36
X-Bar/R Program .....	36
Per375 application .....	37
Checkweighing .....	37
Setting a New Target Percentage and Checkweighing .....	37
Choosing a PLU and Checkweighing .....	38
View the Upper and Lower Tolerances .....	38
Set New Upper and Lower Tolerances .....	38
Grad375 application .....	40
Grade classifying .....	40
Setting weight grades .....	40
Weighing using grades .....	41
<b>Chapter 4 Menus .....</b>	<b>42</b>
Accessing the menus .....	42
Menu annunciators .....	42
Exiting the menus .....	43
USER level menus .....	43
User menu .....	44
Time .....	44
Date .....	45
Site ID .....	46
Seal .....	46
About menu .....	47
Boot .....	47
Firm and App .....	48
Serial .....	48
Option .....	48
Enet .....	49
Dload .....	50
Audit menu .....	50
Counter .....	51
Print .....	51
<b>Chapter 5 Error messages .....</b>	<b>52</b>
<b>Chapter 6 Communications .....</b>	<b>53</b>
Default print formats .....	53
<b>Chapter 7 Supervisor menu .....</b>	<b>55</b>

Supervisor menu for Sim375 application .....	56
Setpoint .....	57
Annunciators .....	57
Inputs .....	57
Print .....	58
Reset .....	58
Check .....	59
Outputs .....	59
Output-gross zero band .....	59
Under segment division .....	60
Over segment division .....	60
Reset .....	60
Battery .....	61
Enable .....	61
Timeout .....	61
Supervisor menu for Mid375 application .....	62
Setpoint .....	63
Tare .....	63
Tare Register 1-10 .....	63
Printing .....	64
Reset .....	64
Check .....	64
Outputs .....	65
Output-gross zero band .....	65
Under segment division .....	65
Over segment division .....	66
Digits .....	66
Type .....	66
Auto Tare .....	67
Reset .....	67
Battery .....	67
Supervisor menu for Adv375 application .....	68
Setpoint .....	69
Tare .....	69
Check .....	69
Outputs .....	69
Outputs-gross zero band .....	70
Under segment division .....	70
Over segment division .....	70
Print total .....	71
Total format .....	71
Clear total .....	71
Digits .....	72
Stats .....	72
Packrun .....	72
Type .....	73
Auto Tare .....	73
Reset .....	73
PLU .....	74
Edit .....	74
Print .....	75
Import .....	76
Export .....	76
Reset .....	76
Battery .....	77
Supervisor menu for Per375 application .....	78
Setpoint .....	79

Tare .....	79
Check .....	79
PLU .....	79
Battery .....	79
Supervisor menu for the Grad375 application .....	80
Setpoint .....	80
Tare .....	80
Grading .....	81
Battery .....	81

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*