



**C-01A**

Weighing controller User Manual

## Table of Contents

<b>1.0 OVERVIEW -----</b>	<b>1</b>
1.1 KEY FEATURES -----	1
1.2 TECHNICAL SPECIFICATIONS-----	1
<b>2.0 INSTALLATION -----</b>	<b>2</b>
2.1 METER FIXED -----	2
2.2 ELECTRICAL CONNECTION -----	2
<b>3.0 DISPLAY PANEL -----</b>	<b>5</b>
<b>4.0 CALIBRATION-----</b>	<b>5</b>
4. 1 PARAMETERS DETERMINED-----	5
4. 2 CALIBRATION PROCEDURE-----	6
<b>5.0 ANALOG OUTPUT TYPE SELECTION AND ADJUSTMENT-----</b>	<b>9</b>
5. 1 OUTPUT TYPE SELECTION-----	9
5. 2 TO ADJUST THE ANALOG OUTPUT AT THE BOTTOM AND THE TOP-----	10
5. 3 TO RESTORE THE ANALOG OUTPUT AT THE BOTTOM AND THE TOP-----	10
<b>6.0 METER WORKING PARAMETERS F2 -----</b>	<b>10</b>
6. 1 OPTION ENTER INTO THE WORKING PARAMETERS OPTION-----	10
6. 2 FUNCTION F2 OPTION PARAMETER GROUP-----	10
<b>7.0 RELAY OUTPUT-----</b>	<b>12</b>
7. 1 RELAY OUTPUT MODE SETTING PROCEDURE-----	12
7. 2 INPUT PRESET VALUE (RELAY COMPARISON VALUE OUTPUT)-----	12
<b>8.0 THE SERIAL INTERFACE SETTING-----</b>	<b>13</b>
8. 1 SETTING PROCEDURE-----	13
<b>9.0 POST INFORMATION -----</b>	<b>13</b>
<b>10.0 ERROR MESSAGES-----</b>	<b>13</b>
<b>11.0 GENERAL TROUBLESHOOTING -----</b>	<b>14</b>
<b>APPENDIX 1 COMMUNICATION PROTOCOL MODBUS RTU-----</b>	<b>15</b>
<b>APPENDIX 2 COMMUNICATION PROTOCOL - CONTINUOUS MODE -----</b>	<b>16</b>
<b>APPENDIX 3 COMMUNICATION PROTOCOLS – COMMAND MODE-----</b>	<b>17</b>
<b>APPENDIX 4 PACKING LIST -----</b>	<b>18</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : the biggest supplier of cash register and scale manuals on the net