

Weighing Indicator

XK3190-A10

User Manual

Content

CHAPTER 1 MAIN SPECIFICATION	-2-
CHAPTER 2 INSTALLATION	-3-
2.1 CONNECTING LOAD CELL TO INDICATOR	-3-
2.2 FRONT VIEW OF INDICATOR	-4-
2.3 KEY FUNCTIONS	-4-
CHAPTER 3 OPERATION	-5-
3.1 POWER ON & ZERO SETTING	-5-
3.2 MANUAL ZERO SETTING	-5-
3.3 TARE	-5-
3.4 ACCUMULATING	-5-
3.5 CLOCK SET.....	-6-
3.6 USER FUNCTION STEETING	-6-
3.7 HIGH AND LOW VALUE SETTING AND APPLICATION.....	-8-
3.8 CONNECT SCOREBOARD TO INDICATOR	-8-
3.9 SERIAL COMMUNICATION AND INDICATOR CONNECTION	-9-
CHAPTER 4 CALIBRATION	-10-
CHAPTER 5 ERROR INDICATION	-12-
CHAPTER 6 ERROR MAINTENANCE	-12-

Chapter 1 Main Specification

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*