

XK3190-A9P

WEIGHING INDICATOR

MANUAL

PLEASE READ THIS MANUAL VERY CAREFULLY
BEFORE USE

Dec 2006

Specifications subject to change without prior notice

CONTENTS

1. GETTING STARTED
2. TECHNICAL PARAMETERS AND SPECIFICATIONS
3. LAYOUT AT FRONT AND BACK
4. Connecting to Other Devices
5. Calibration
6. Operation
7. CODE DISPLAY
8. APPENDIX

1. GETTING STARTED

CAUTION

- *This is not a toy. Keep out of reach of children;*
- *This indicator is not an explosion proof device;*
- *This indicator is not a water proof device;*
- *Do not open this indicator, no user serviceable parts inside. Always contact supplier for service.*

1.1 Introduction

Weighing indicator XK3190-A9P adopts high precision double integral A/D conversion technology, widely applied in electronic platform scale, electronic floor scale, electronic truck scale, static railroad track scale and so on alike static weighing system equipped with 1~8 load cell.

1.2 Features

- High precision A/D conversion with readability 30000
- Call and display inner code to replace weight observing and analysis tolerance
- Able to setup zero-tracking range, zero(auto/manual) range and zero speed
- Able to setup print function for fast filled weighing bill
- Able to save 255 vehicle ID and corresponding tare weight, 100 cargo ID, 205 weighing records

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*