

XK3190-DS3
Weighing Indicator

Instruction for
Calibration and
Adjustment

V 1.01

Shanghai Yaohua Weighing System Co., Ltd.

Contents

Chapter 1	Technical Parameters	1
Chapter 2	Installation and Connection	2
Chapter 3	Address of Digital Load cell	3
	Section One What's the address of digital load cell?	
	Section Two Manual view/modification of digital load cell address	
	Section Three Auto view/modification of digital load cell address	
	Section Four View numbers and addresses of load cells that are connected to the indicator	
	Section Five Parameter Initialization of Digital Load cell	
Chapter 4	Calibration and Adjustment	5
	Section One Calibration	
	Section Two Compensation Calibration	
	Section Three Automatic Switch of Scale Interval	
	Section Four Parameter Back-up and Recovery	
Chapter 5	Correction of Angular Difference	9
	Section One View weight code of all load cells and weighing platform leveling	
	Section Two Semi-automatic correction of angular difference	
	Section Three Full automatic correction of angular difference by angular position	
	Section Four Full automatic correction of angular difference by shaft	
	Section Five Initialization of angular difference coefficient	
	Section Six Input angular difference parameters of a load cell	
Chapter 6	Timed Shutdown and Password of Calibration	13
Chapter 7	Overload record	14
Appendix	Indicator Information Cue	15

Dear customers,

Please read this instruction before using the indicator. During the use, for ensuring safety, the reliable power ground shall be made.

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*