


SHARP®

ELECTRONIC CASH REGISTER

MODEL

ER-1970

INSTRUCTION MANUAL

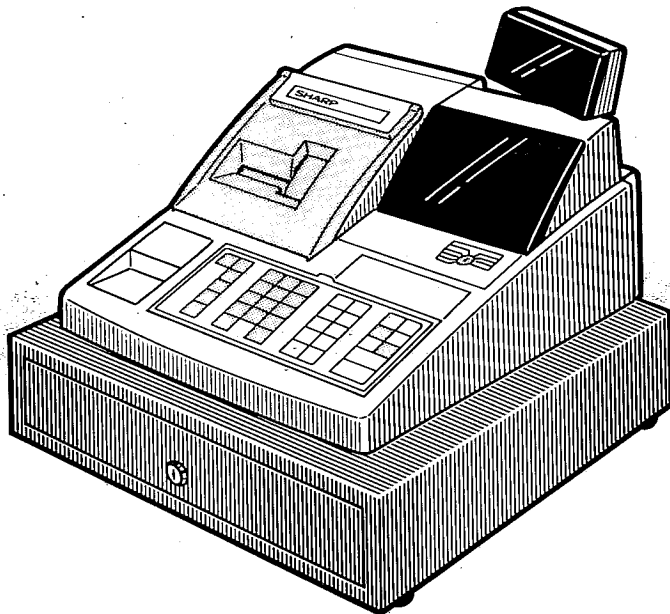

Workshop
Copy.

If undue force is applied to the drawer, the cash register will become unstable.

This apparatus complies with the requirements of EN 55014, 02, 1987 and BS 800: 1988.

CAUTION:

For a complete electrical disconnection pull out the mains plug.

CAUTION:

The socket-outlet shall be installed near the equipment and shall be easily accessible.

INTRODUCTION

Thank you very much for your purchase of the SHARP Electronic Cash Register Model ER-1970. Please read this Manual carefully before operating your machine in order to gain a full understanding of its functions and performance. Please keep this Manual for future reference. It will help you if you encounter any operational problems.

IMPORTANT

- **Install your ER-1970 in a location that is not subject to direct radiation, unusual temperature changes, high humidity or exposed to water sources.**
Installation in such locations could cause damage to the cabinet and the electrical components.
- **The register should not be operated by an individual with wet hands.**
The water could seep into the interior of the ER-1970 and cause component failure.
- **When cleaning your register, use a dry, soft cloth. Never use volatile liquid, such as benzine and thinner.**
The use of such chemicals will lead to discoloration or deterioration of the cabinet.
- **The ER-1970 register plugs into any standard wall outlet (official (nominal) voltage).**
Other electrical devices on the same electrical circuit could cause the ER-1970 to malfunction.
- **If the register malfunctions, call your local dealer for service - Do not try to repair the register yourself.**
- **For a complete electrical disconnection, pull out the mains plug.**
The power is not turned off even when the mode switch is turned to the "⏻" position.

PRECAUTION

This Electronic Cash Register has a built-in memory protection circuit which is operated by rechargeable batteries.

As you know, all batteries will, in time, dissipate their charge even if not used.

Therefore to insure an adequate initial charge in the protection circuit, and to prevent any possible loss of memory upon installation, it is recommended that each unit be allowed to recharge for a period of 24 to 48 hours prior to use by the customer.

In order to charge the batteries, the machine must be plugged in and its power switch must be set to the "ON" position. This recharging precaution can prevent unnecessary initial service calls.

CONTENTS

	Page
• PHYSICAL CHARACTERISTICS OF THE ER-1970 REGISTER	5
• KEYBOARD LAYOUT AND SWITCH AND KEY DESCRIPTIONS	7
1. Keyboard layout	7
2. Mode switch and mode keys	9
• DISPLAYS	10
• PROGRAMMING	11
1. Setting the date and time	11
(1) Setting the date (#250)	11
(2) Setting the time (#251)	12
2. Setting the register number (#252)	12
3. Setting the consecutive number (#253)	13
4. Programming for departments	13
(1) Programming of unit prices (#110)	13
(2) Functional programming (#210)	14
(3) Programming of sign and tax status (#211)	15
(4) Setting the limit amount (HALO) of entry for department (#212)	16
(5) Programming of direct PLUs (#219)	17
5. Programming for PLUs	18
(1) Definition of PLU codes and department assignment (#121)	18
(2) Programming of unit prices (#120)	19
(3) Programming of sign and tax status (#221)	20
(4) Programming of direct PLUs	21
6. Function parameter programming	22
(1) Programming for the VAT , %1 , %2 , EX1 , and EX2 keys (#130)	22
(2) Assigning the plus or minus sign for the %1 and %2 keys (#231)	22
(3) Setting the limit amount (HALO) of entry for the ⊖1 , ⊖2 , RA , and PO keys (#232)	23
7. Programming for the TL , CR , CR2 , and CH keys	24
(1) Programming the functions of the finalization keys (#260)	24
(2) Setting the limit amount (HALO) on change for cheque (#261)	25
(3) Setting the limit amount (HALO) of entry for the CH , CR , and CR2 keys (#262)	26
8. Programming for optional feature selection (#256)	27
9. Setting the sentinel amount (#257)	28
10. Programming alarm length of time with drawer opening (#270)	28
11. Reading stored programs	29
(1) Program details and procedures for their reading	29
(2) Sample printouts	29
• REGISTRATIONS	32
• Preparations for entries	32
• Error warning	32
1. Item entries	33
(1) Single item entries	33

	Page
(2) Repeat entries	35
(3) Multiplication entries	36
(4) Split-pricing entries	37
(5) Single item cash sale (SICS) entries	38
(6) Half pint entries	38
2. Display of subtotal	39
3. Finalization of transaction	39
(1) Cash or cheque tendering	39
(2) Cash plus cheque tendering	40
(3) Cash or cheque sale without a tender amount entry	40
(4) Credit sale	41
(5) Cash or cheque plus credit tendering	41
4. Computation of VAT (Value Added Tax)/tax	42
5. Percent calculations (premium or discount)	43
(1) Percent calculation for item entries	43
(2) Percent calculation for the subtotal	44
6. Deduction	44
(1) Deduction for item entries	44
(2) Deduction for the subtotal	45
7. Refund entries	45
8. No sale (exchange)	45
9. Printing of non-add code numbers	46
10. Received on account entries	46
11. Paid out entries	46
12. Currency exchange	47
• CORRECTION	48
1. Correction of the last entry (direct void)	48
2. Correction of the next-to-last or earlier entries (indirect void)	48
3. Correction of the subtotal (subtotal void)	49
• CORRECTION AFTER FINALIZING A TRANSACTION (AFTER GENERATING A RECEIPT)	50
• AFTER TRANSACTION RECEIPTING	51
• OVERLAPPED CASHIER ENTRY	52
• TIME DISPLAY AND AUTOMATIC UPDATING OF THE DATE	53
• READING (X) AND RESETTING (Z) OF SALES TOTALS	54
– SAMPLE REPORTS –	55
• COMPULSORY CASH/CHEQUE DECLARATION	61
• IN CASE OF POWER FAILURE	62
• IN CASE OF PRINTER'S MOTOR LOCKING	62
• INSTALLING AND REMOVING THE PAPER ROLL	63
• REPLACING THE INK ROLLER	65
• INK REFILL	66

- REMOVING THE TILL AND THE DRAWER 67
- OPENING THE DRAWER BY HAND 67
- BEFORE CALLING FOR SERVICE 68
- Program resetting – 68
- SPECIFICATIONS 69

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)