LP-II

Electronic Price Computing
Label/Receipt Printing Scale

OWNER'S MANUAL

REV: 2.0 JAN. 2002

CAS

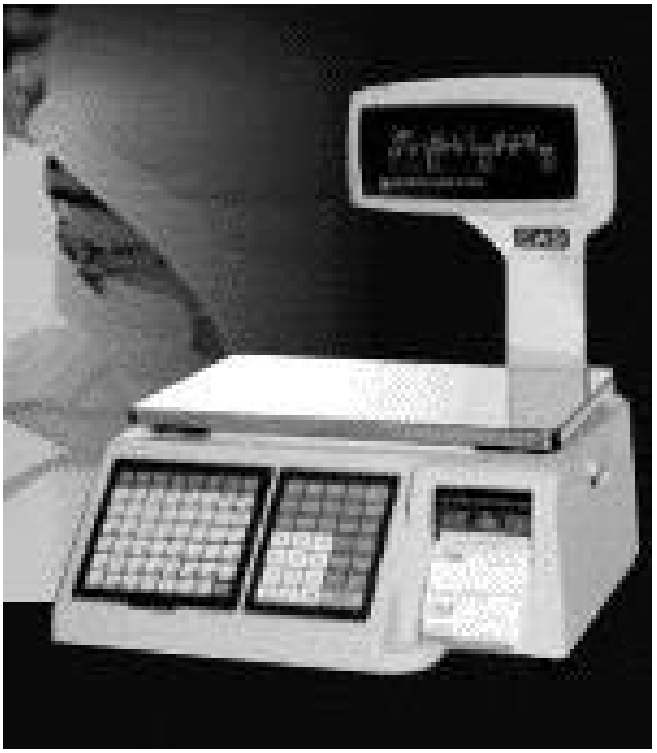

2001, CAS® (USA) CORPORATION EAST RUTHERFORD, NEW JERSEY 07073

Attention:

Copyright© 2001, by CAS Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior expressed written permission of this company.

Disclaimer:

This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties of merchantability or fitness for any particular purpose. Any software describes in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not this company, its distributors, or its dealers) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, this company reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

TABLE OF CONTENTS

PAGE

1 General 6
1.1 Introduction 6
1.2 Model and Specifications 7
1.3 Options and Accessories 8
1.4 Dealers and Service 9
2 Unpacking and Assembly 10
2.1Box Contents 10
2.2 Assembly of Display Column 11
3 Proper Operation 12
3.1 Environmental Considerations & Safety 12
3.2 Leveling and Location 13
3.3 Dont's 14
3.4 Cleaning and Maintenance 15
3.5 Power Outlet and Requirements 16
4 Nomenclature 17
4.1 Scale Overview 17
4.2 Display and Indicators 18
4.3 Printer 19
4.4 The Sales Mode Numeric Key Pad Configuration (Standard) 20
4.5 The Sales Mode Numeric Key Pad Configuration (USA) 23
4.6 The Program Mode Numeric Key Pad Configuration 26
4.7 The Sales Mode PLU Key Pad Configuration 28
4.8 The Program Mode PLU Key Pad Configuration 29
5 Quick Set-Up 31
5.1 Installation of the Label Roll 31
5.2 Basic Quick Start 33
6 Programming 36
6.1 Main Menu 36
6.1.1 Store Settings 37
6.1.2 Store Name, Address, & Number 37
6.1.3 Security Control 38
6.1.4 Department Names 40
6.1.5 Scale Assignments 41
6.1.6 Date and Time 41
6.2 Settings 42
6.2.1 Print Inhibiting 42
6.2.2 Sales Messages 42
6.2.3 Scrolling Message 43
6.2.4 Scrolling Sequence 43
6.2.5 Tax Rates 45

TABLE OF CONTENTS

PAGE

6.2.6 Label Type 45
6.2.7 Adjust Feed Length 46
6.2.8 Origin 47
6.3 PLU Programming 47
6.3.1 PLU Price Change 48
6.3.2 Creating PLUs 49
6.3.3 Copying PLUs 57
6.3.4 Renumbering PLUs 58
6.3.5 Listing PLUs 58
6.3.6 Edit PLUs 59
6.3.7 Deleting PLUs 59
6.3.8 Edit PLU Text 60
6.4 Speed Key Programming 60
6.5 Global Settings 61
6.6 Network management 62
7 Sale Modes 63
7.1 REG, MGR, and RPK Modes 63
7.2 REG Mode 63
7.2.1 ZERO Key 64
7.2.2 TARE Key 65
7.2.3 lb/kg Key 66
7.2.4 ON/OFF Key 66
7.2.5 PLU/SHIFT Key and Speed keys 67
7.2.6 MISC PLU keys 67
7.2.7 FOR key 69
7.2.8 1/2, 1/4, and 100 g keys 70
7.2.9 Clear key 70
7.2.10 ADD, VOID, and ST/TTL keys 71
7.2.11 SAVE key 72
7.2.12 AUTO/MANUAL key 72
7.2.13 PRE-PACK key 73
7.2.14 X key 73
7.2.15 RETURN key 74
7.2.16 OVERRIDE key 75
7.2.17 DEPT key 76
7.2.18 Temporary Date Change 77
7.2.19 Temporary Date Print Inhibit 77
7.2.20 Temporary PLU Data Change 78
7.3 MGR Mode 78
7.4 RPK Mode 79
8 .X and Z Modes 80

TABLE OF CONTENTS

PAGE

8.1 Reading Sales Summaries: X mode 80
8.1.1 PLU Sales 80
8.1.2 MISC PLU Sales 82
8.1.3 Group Sales 82
8.1.4 Department Sales 83
8.1.5 Scale Sales 83
8.1.6 Hourly Sales 84
8.1.7 Clerk Sales 84
8.1.8 Summary Report 84
8.2 Resetting Sales Summaries: Z mode 85

Appendix A: Country Codes 87

Appendix B: Label Formats 89

Appendix C: Brief Manual 91

Warrantee

Click here to download the full manual at THE-CHECKOUT-TECH.COM