
SERVICE MANUAL LABEL PRINTING SCALE NETS Ver 2.0 (April. 2006)

ACOM Inc.

Specifications are subject to change without notice to improve Vol. No. N200604

CHAPTER I. INSTALLATION

1. UNPACKING AND ASSEMBLY

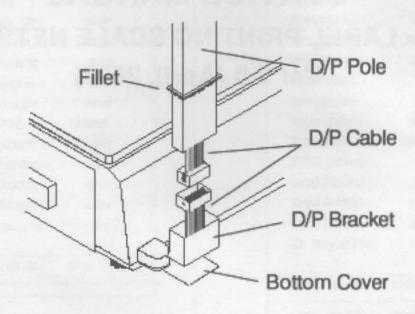

- 1). Connect the D/P Cable.
- 2). Put in display assembly into the display bracket of the scale body.
- 3). Fasten the display pole with two of M4 screws.
- 4). Arrange the harness wire into the display pole.
- 5). Fasten the bottom cover on the display bracket with four of M3 screws

2. PRECAUTIONS

- 1). Place the scale on a flat and rigid desk that is free of vibrations
- 2). Place the scale out of direct sunlight
- 3). Do not place the scale near the radio device emits strong electromagnetic fields
- 4). Do not apply a sudden impact to the platter
- 5). Always level the scale
- 6). Do not spill the water on the scale
- 7). Do not use cleaners which includes solvent or sinner
- 8). Scale should be calibrated by authorized person prior to being to used
- 9). Turn on the scale 10 minutes before using

This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store:

https://the-checkout-tech.com/manuals/acom/NETS Service including calibration manua

And our free Online Keysheet maker:

https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM